
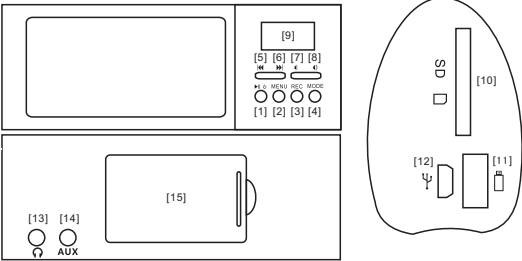 
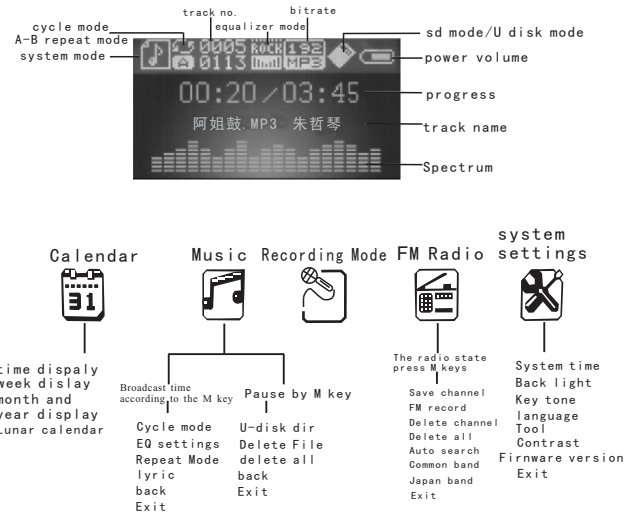 
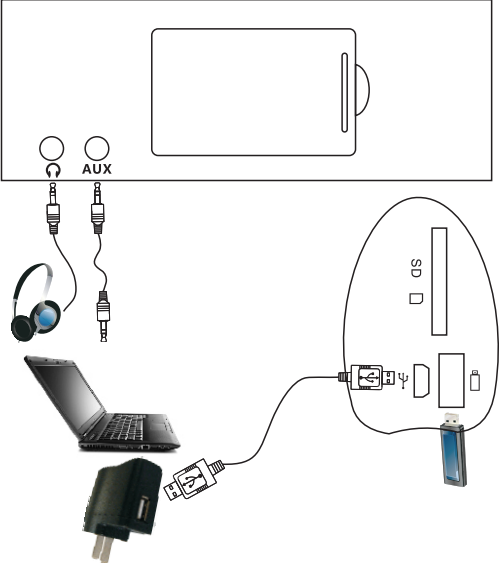 


<div>MODEL:L530</div> <div>Use Guide</div> <div></div> <div>-1-</div>	<div>I . Attentions:</div> <div><div><div>1. Please keep and use the product in normal temperature.</div><div>2. Please do not expose the product in rain or humidity surroundings</div><div>3. Please do not throw the product avoid the broken</div><div>4. Please do not disassemble, maintain or transform the product</div><div>5. Please remove the Lithium battery and memory card if no use longtime.</div></div></div> <div>II . Friendly tips:</div> <div><div><div>1. Please do not enjoy biggest sound for longtime avoid the damage to your hearing and service life of the product.</div><div>2. Please use the earphone mode in public avoid to disturb others</div><div>3. Please switch off the power once any fault happened,and pull up the usb connect invoid speakers or other components damage.</div><div>4. No response afer the USB/Micro SD card inserted ,how to solve it ?please make sure the USB/Micro SD card without any quality problem and the music in it in MP3/WMA fomat.</div><div>5. FM radio can not get any signal.how to solve it?please make sure there are FM signal around,whether it already scanned the grasped the local radio stations</div><div>6. how to improve the signal when the weak signal place?please plug the earphone to help to enlarge the signal for the earphone wire can be use as an antenna.</div></div></div> <div>-2-</div>	<div>III. Buttons and Functions summarize:</div> <div></div> <div><div><div>[1] Play / Pause: long Press the on / off; short press this button will be pause under the U disk/SD card/AUX status,press this button will scan the radio channels and save channels under the FM status.return to the previous menu.</div><div>[2] Menu key: when the playing music short press to enter the corresponding sub-menu, select loop mode, sound mode, repeat mode, lyrics, etc.; when the music pause short press to select the card into the appropriate sub directory, U disk directories, delete files, etc. short press under the FM states Select to enter the corresponding sub-station auto-search, delete, radio broadcasts, press [1] to return to playing status.</div><div>[3]Record button:short Press the record button will start recording, after recording press the record button again,the unit will save the recording</div></div></div> <div>-3-</div>	<div>and return to the recording before the interface.(Audio files stored in the U disk or SD card; long press the record button and play the recording into the audio file)</div> <div>[4] Mode Key: after insert U disk / SD card, short press mode key bottom will be U disk / SD Card / FM to switch between</div> <div>[5] Prev:short press this button to the previous music when playing music; short press this button to the under channels under the FM status. None of the key role AUX status. Press up under the menu navigation;</div> <div>[6] next:short press this button to the next music when playing music; short press this button to the upward channels under the FM. None of the key role AUX status. Press up under the menu navigation;</div> <div>[7] Volume Less: when Play status to Press this button decrease the volume</div> <div>[8] Volume increase: when Play status to Press this button Increase the volume</div> <div>[9] Display: Displays status of various functions.</div> <div>[10]SD card slot:plug the SD card flash memory to play the mp3/wma in it .</div> <div>[11]USB in : plug the USB flash memory to play the mp3/wma in it .</div> <div>[12]Mini USB charging port:support DC5V, 800mA outside power.</div> <div>[13]Earphone in:insert the earphone to work as a FM antenna.</div> <div>[14]AUX IN : External Audio input, support mp3, DVD player, ipod and so on.</div> <div>[15] Battery door: BL-5C battery</div> <div>-4-</div>	<div>IV . Features of the product:</div> <div><div>[USB and TF card both support and MP3/WMA support] Build in USB and TF card dual decoding,play the music in MP3/WMA in the memory.</div><div>[FM radio] Build in FM radio module,rounding antenna,FM time seting, Recoring the radio station,Scan and save the radio station automatically.</div><div>[Digital screen display] display various operating and functional status</div><div>[Dual power supply] Support both PC USB power supply and BL-5C Lithium battery.</div><div>[Restore memory function] Replay at the stop point sast time in SD card or USB.</div><div>[Earphone port] Match with 3.5mm earphone output.</div></div> <div> </div> <div>V . Technical Parameters:</div> <div><div>Rated Power(R.M.S.) :2W*1</div><div>Rated Impedance:4OHM</div><div>Speaker Unit:40mm*1</div><div>Frequency response:200Hz-18KHz</div><div>Separating :≥65dB</div><div>SNR :≥85dB</div><div>THD:≤0.1% 1W 1KHz(DC3.7V)</div></div> <div>-5-</div>
--	---	--	---	---

<div>VI. Power supported</div> <div>Lithiume battery be charged by USB port or USB the DC5V, 800Ma USB power.</div> <div>VII. System components</div> <div>【Accessories in packing】</div> <div>PortaIbe Stereo Speaker -----1pcs</div> <div>USB cable -----1pcs</div> <div>Audio Cable-----1pcs</div> <div>User Manual-----1pcs</div> <div>Warrantycard -----1pcs</div> <div>Optionalaccssories:</div> <div>Li-on battery-----1pcs</div> <div>-6-</div>	<div>VIII. System directory (menu)</div> <div></div> <div>-7-</div>	<div>IX. System connection diagram</div> <div></div> <div>-8-</div>	<div>X. Common functions introduce</div> <div><div>*Press "1"for 2 seconds to power on</div><div>*Press any key enter the main menu when without a U disk or TF card in it .</div><div>*Main menu contain five SUB menu:calendar,music,FM radio and system settintg.</div><div>*Calendar setting: Enter the main menu and press [2] to enter "calendar setting",short press [5]or [6] to setting the calendar. short press [1] back.</div><div>*Music play: It play the music automatically when the U disk or SD card inserted. Press [1] to play and pause when playing. Press [6] to next music and press [5] to previous music,and long press [8] to increase the volume and long press [7] to decrease the volume.</div><div>*Audio settings: in the music player when short press [2] key and then press [5] or [6] key to select audio mode.</div><div>*Repeat mode: in the music player when short press [2] key and then press [5] or [6] key to select repeat mode and Press [2] key to see A flashing (At this point record the starting point)Press [6] key to see B flashing (At this point record the starting point)Then [6] key to the system between the A-B repeat, three times again after the A flashing.Press [2] key to exit the repeat mode.</div><div>*Lyrics synchronism:Press [2] enter the play seting when playing,short perss [5]or [6] choose "lyrics",and then press [2] again to show the lyrics</div></div> <div>-9-</div>	<div>fullscreen.(Remark: lyrics should be download and pre saved as the same name as the music in same folder.)</div> <div>*FM mode: Advanced in to main menu, press [6] key to select "FM Mode " and then [2] key will open the radio state.</div> <div>*System Settings: Advanced in to main menu, press [6] key to select "System Settings " and then [2] key will Open the drop-down menu</div> <div>*System time: press [5] or [6] to choose the "system time" and press [2] to enter it,and then adjust the year-month-day-hour-minute-second.</div> <div>*Backlight time: press [5] or [6] to choose the "Backlight time" and press [2] to enter it,and then press [5] or [6] to adjust the time from 0-30 seconds, 00 will be backlight always on, 09 will be last for 9 seconds and press [2] to save it.</div> <div>*Language select: press [5] or [6] to select the "Language" and press [2] to save it. And language are: SimpleChinese,English,Italian,Dutch,Spanish, Portuguese..</div> <div>*Tool> Turn off setting: turn off time from 0-120 minutes, 00 will be never turn off, 10 will be turn off automatically in 10 minutes. And press 3 to save your setting.</div> <div>*Contrast Adjustment : From 0-15, and press 3 to save it.</div> <div>*Firmware version: can not be setted.</div> <div>*Exit:Exit setup.</div> <div>-10-</div>
--	---	--	---	---